


# SOUND WALLBOXES AND SPEAKER POSITIONS

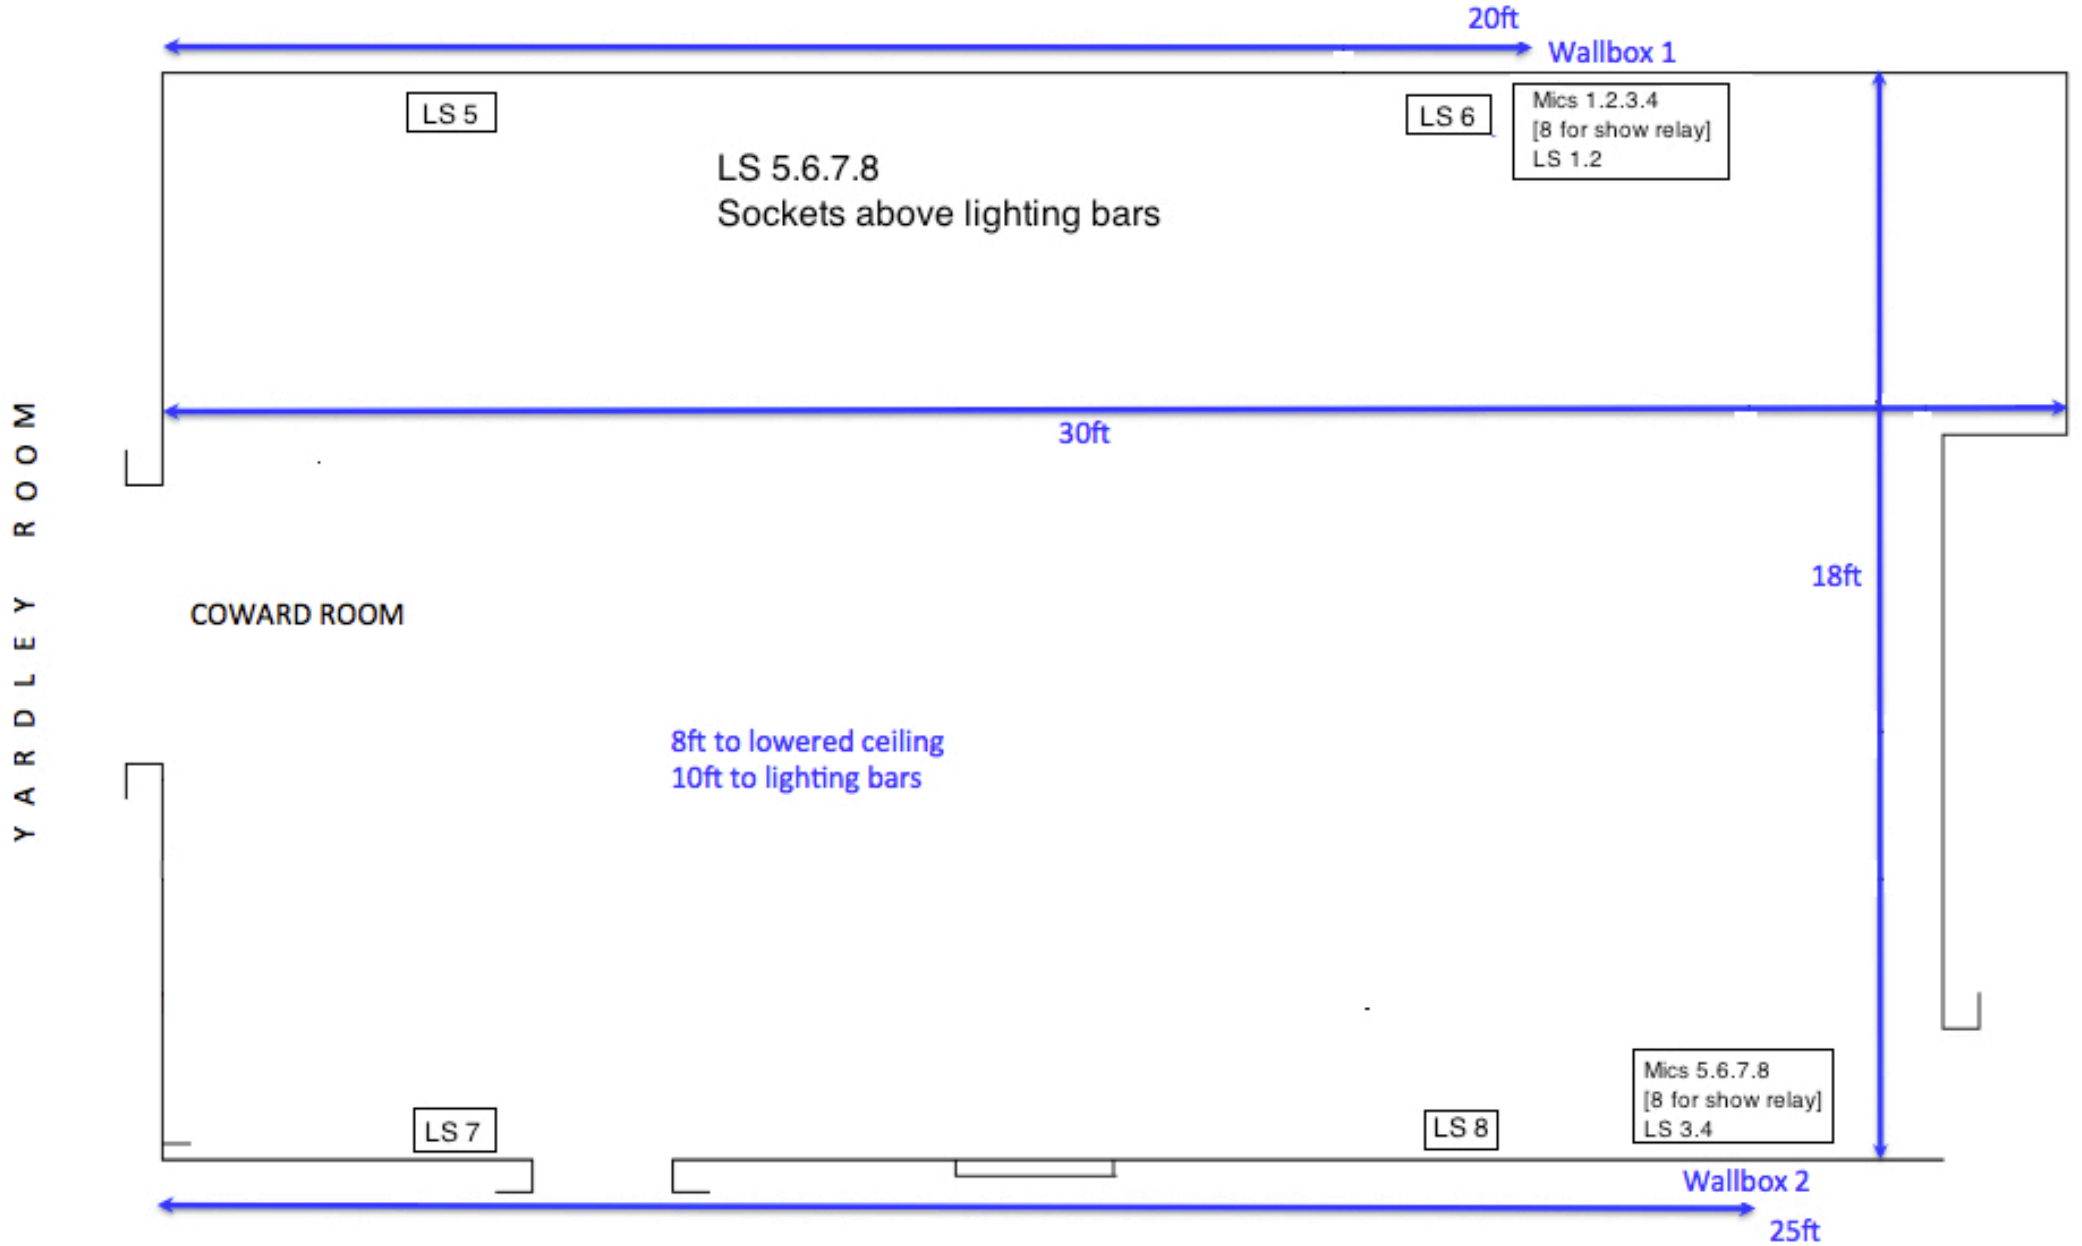

## SOUND PREP SOUND RACK

OVISLINK ETHER FH16 DS 16 port Switch	1U
BLANK	3U
BLANK	1U
BLANK	1U
BEHRINGER ULTRA CURVE SIGNAL PROCESSOR	1U
YAMAHA SPX990 DIGITAL REVERB/FX	1U
DENON MINI-DISC RECORDER DN M10550R	3U
DENON CD DN1000F	2U
TASCAT RDAT DA20 MKII	3u
DENON DOUBLE CASSETTE DN770R	3U
2 ROW 24 way JACKFIELD	1U
2 ROW 24 way JACKFIELD	1U
2 ROW 24 way JACKFIELD	1U
2 ROW 24 way JACKFIELD	1U
2 ROW 24 way JACKFIELD	1U
2 ROW 16 XLRs - LS VIDEO CAT5	2U
LIGHTING DMX XLRs	1U
AMP 1+2            INTER M R150 REF POWER AMP	2U
BLANK	1U
AMP 3+4            CROWN 460 CSL POWER AMP	2U
EMO IEC POWER DISTRIBUTION	2U
AMP 5+6            CITRONIC PPX600 POWER AMP	2U
MONT AMP L+R    HH VX 150 POWER AMP	1U

# SOUND PREP JACKFIELD

ROW A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
	1	2	3	4	T/Ls to AUDITORIUM JACKFIELD				8	9	10 FOH anns	11 ROH anns	12 Show	1	2	SS20 MIC		5	6	SS21 MIC		8	SHOW RELAY	PARALLEL	

ROW B	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24		
	1	2	3	4	5	6	7	MIXER I/Ps				13	14	15	16	1	2	BEHRINGER ADA8200 MIC I/Ps						5	6	

ROW C	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
									MINI DISC O/P		CD O/P		DAT O/P					YARDLEY T/Ls		CASSETTE 1 O/P		CASSETTE 2 O/P		REVERB O/P

ROW D	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	1	2	BEHRINGER ADA8200 LINE I/Ps		5	6																		

ROW E	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

ROW F	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

ROW G	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	1	2	3	4	5	6	7	MIXER O/Ps				13	14	15 Stereo Lt	16 Stereo Rt							PARALLEL		

ROW H	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	1	2	LS AMPS I/Ps		5	6	FOH													GRAPHIC I/P		COMP LIM I/P		

ROW I	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
																					GRAPHIC O/P		COMP LIM O/P		

ROW J	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
			MINI DISC I/P		CASSETTE I/P		DAT I/P									REVERB I/P						PARALLEL		


XLR K	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	COWARD LS SOCKETS								YARDLEY LS SOCKETS		PREP MONT LS		COWARD LS SOCKETS		PREP	COWARD

| NORMALLED JACKS

XLR L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	LSA O/Ps								CAT5 DATA LINES							

# YAMAHA LS9 MIXER -SCENE 1 DEFAULT SETUP

16 Mic/Line inputs  
 16 outputs with 16 mix buses  
 Configurable memory scenes.

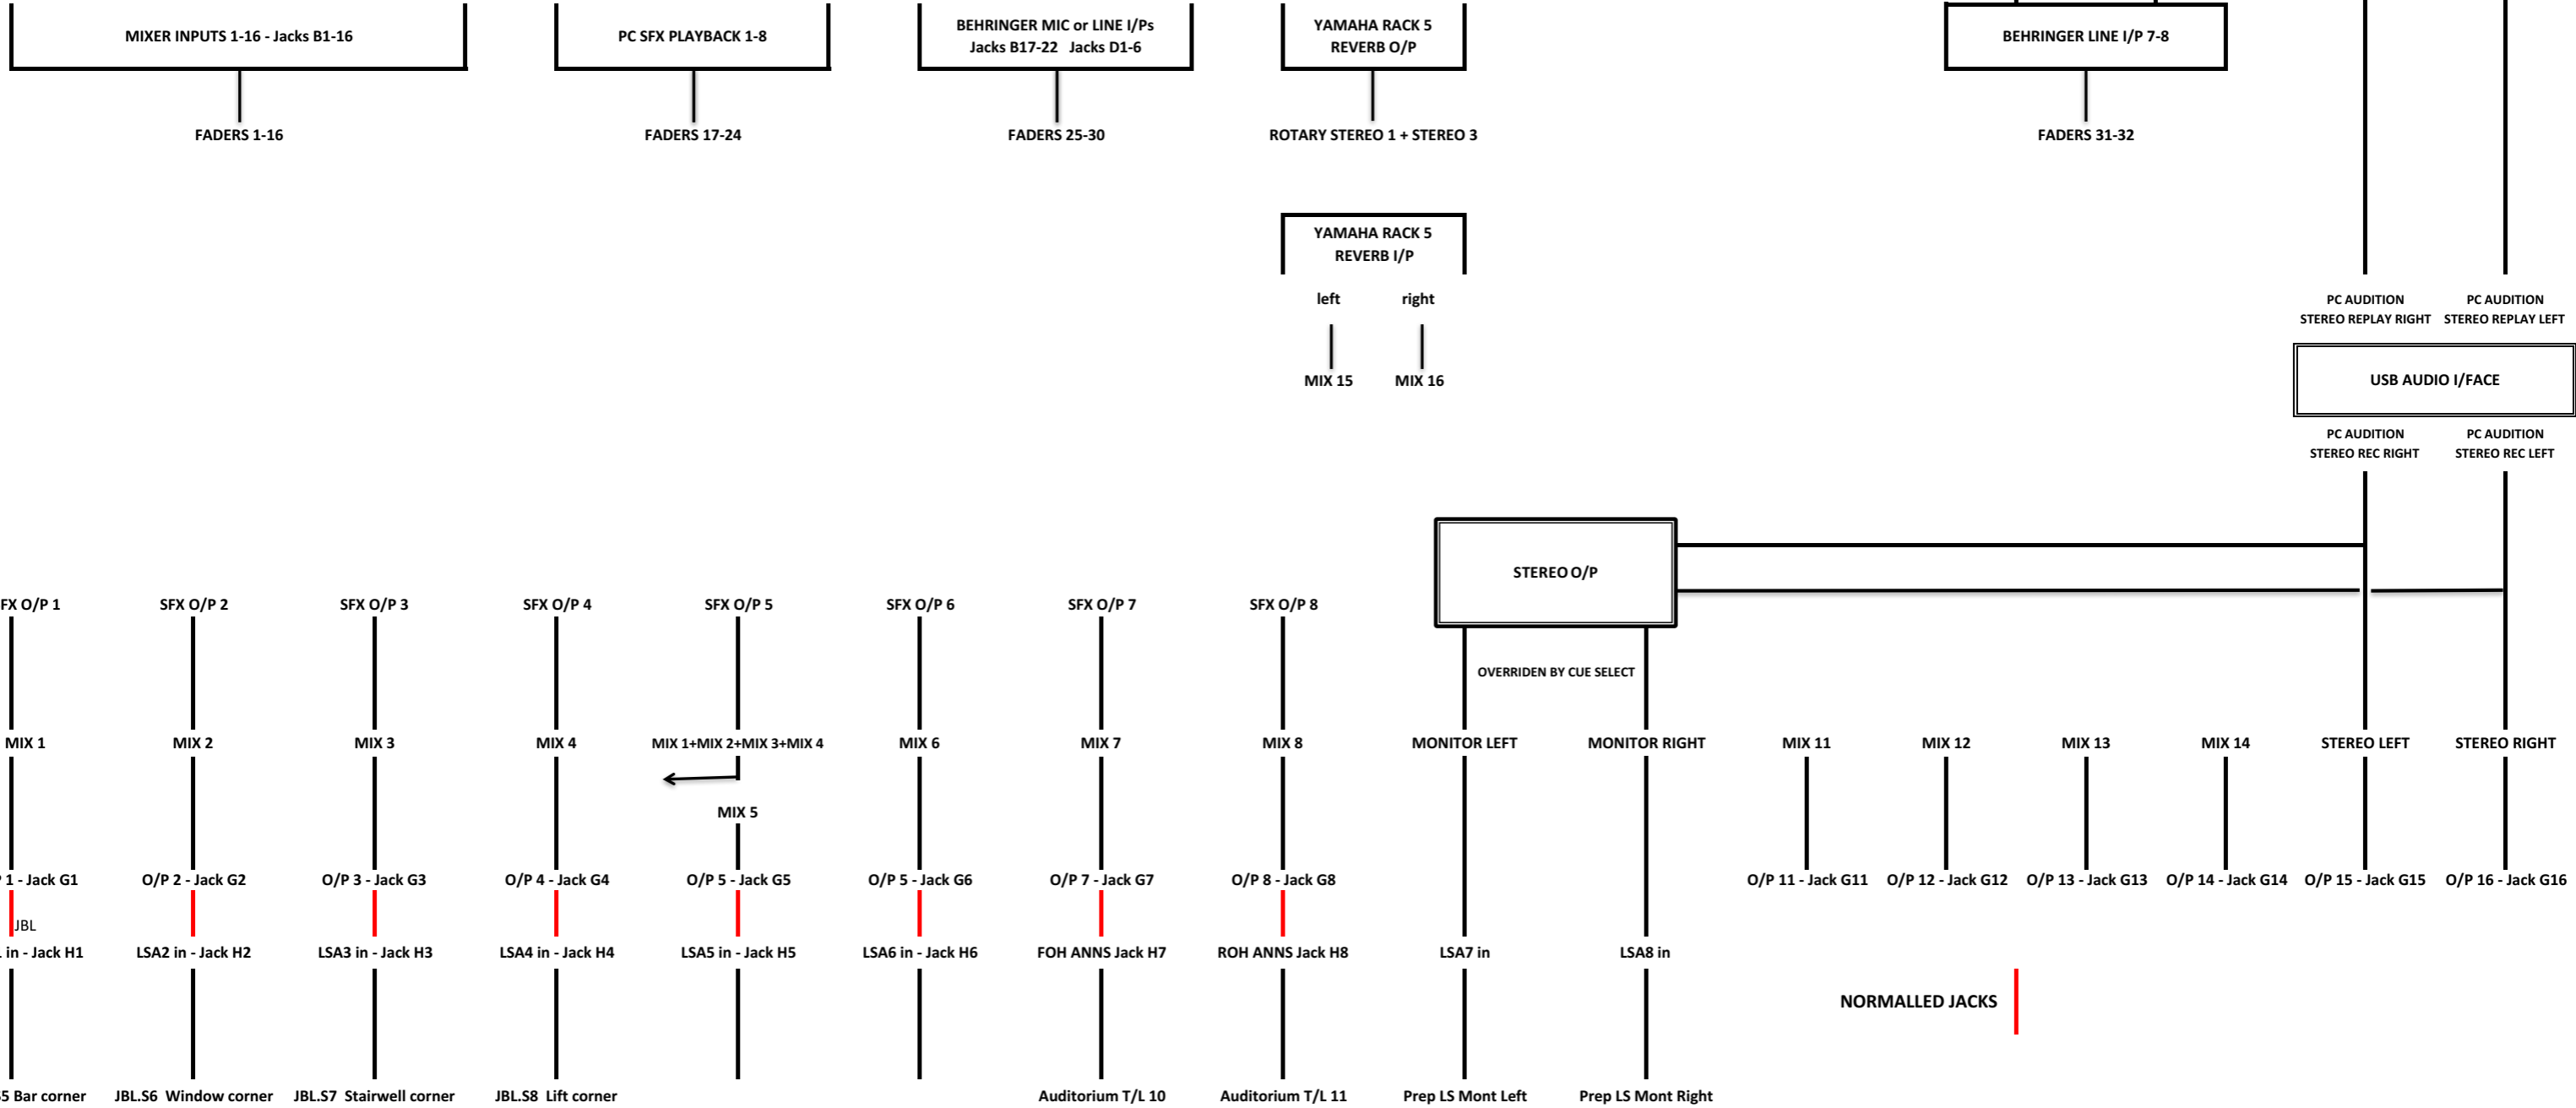

# TTC SET-UP FOR SFX PLAYBACK FROM COWARD INTO SOUND PREP YAMAHA MIXER

COWARD LAPTOP



USB CABLE

USB to  
CAT5 unit

CAT5 DATA CABLE




COWARD CEILING DATA SOCKET

SOUND PREP PATCHBAY DATA SOCKETS

PREP CONTROL DESK T/L



PATCH CORD LINK

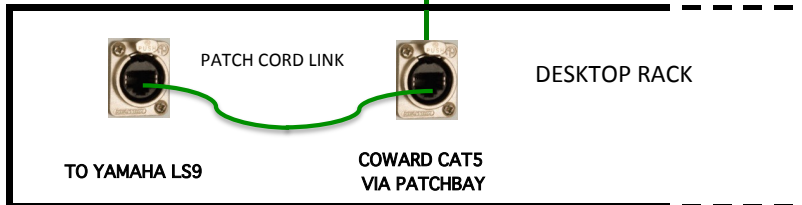

CHNL.17 CHNL.18 CHNL.19 CHNL.20 CHNL.21 CHNL.22 CHNL.23 CHNL.24

SFX.1 Bar	SFX.2 Window	SFX.3 Stairwell	SFX.4 Lift	SFX.5 All	SFX.6	SFX.7 FOH	SFX.8 BOH
--------------	-----------------	--------------------	---------------	--------------	-------	--------------	--------------